



User Manual

MiVue™ C380D Series

Revision: R00
(3/2018)

Disclaimer

The screenshots in this manual may differ between different operating systems and software versions. You can download the latest User Manual of your product from Mio™ website (www.mio.com).

Specifications and documents are subject to change without notice. MiTAC does not warrant this document is error-free. MiTAC assumes no liability for damage incurred directly or indirectly from errors, omissions or discrepancies between the device and the documents.

Note

Not all models are available in all regions.

Depending on the specific model purchased, the colour and look of your device and accessories may not exactly match the graphics shown in this document.

MiTAC Europe Ltd.
Spectrum House, Beehive Ring Road,
London Gatwick Airport, RH6 0LG,
UNITED KINGDOM


Table of Contents


Getting to know your dash cam.....	4
Rear camera.....	4
Using your dash cam in a vehicle.....	5
Precautions and notices.....	5
Inserting a memory card.....	8
Formatting a card.....	8
Connecting to your computer.....	8
Turning the dash cam on.....	9
Power button.....	9
Restarting the dash cam.....	9
System icons.....	10
Function keys.....	10
Switching screens.....	11
Setting the date and time.....	11
Recording in driving mode.....	11
Continuous recording.....	11
Event recording.....	12
Camera mode.....	12
Playback mode.....	13
Safety camera alerts.....	14
Adding a safety camera.....	14
Updating safety camera data.....	15
System settings.....	15

MiVue Manager	18
Installing MiVue Manager	18
Playing the recording files	18
For more information	21
Caring for your device	21
Safety precautions.....	22
About charging	22
About the charger.....	22
About the battery	22
About GPS	23
Regulatory information	23
Declaration of conformity	24
WEEE.....	24

Getting to know your dash cam

 
Note: The screenshots and other presentations shown in this manual may differ from the ones generated by the actual product.

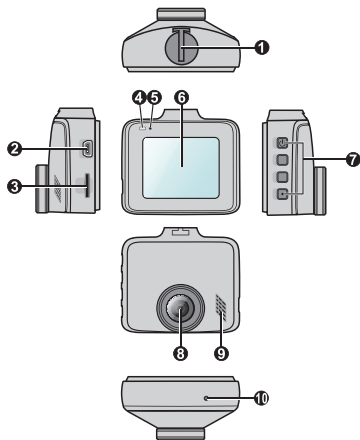

- ❶ Device mount socket
- ❷ Mini-USB connector
- ❸ Memory card slot
- ❹ System indicator
- ❺ Microphone
- ❻ LCD screen
- ❼ Power button () / Function keys
- ❽ Camera lens
- ❾ Speaker
- ❿ Shutdown button

Rear camera

 Depending on your model, your device may support a rear camera (may be sold separately).



- ❶ Mounting pad
- ❷ Camera lens
- ❸ Adjustment bolt
- ❹ Micro-USB connector

 
Using your dash cam in a vehicle

Precautions and notices


- Do not operate the device while driving. Using this product does not change the requirement for a driver to take full responsibility for his or her behavior. This responsibility includes observing all traffic rules and regulations in order to avoid accidents, personal injury or property damage.
- A window mount is needed when using the dash cam in a car. Make sure that you place the dash cam in an appropriate place, so as not to obstruct the driver's view or deployment of airbags.
- Make sure that no object is blocking the camera lens and no reflective material is placed near the lens. Please keep the lens clean.
- If the car's windshield is tinted with a coating, it may impact the recording quality.
- To ensure the highest quality recordings, you are advised to place the dash cam near the rear view mirror.
- Select an appropriate location for mounting the device in a vehicle. Never place the device where the driver's field of vision is blocked.
- If the car's windshield is tinted with a reflective coating, it may be athermic and impact the GPS reception. In this instance, please mount your device where there is a "clear area."
- The system will automatically calibrate the G sensor of the device during start-up. To avoid G sensor malfunction, always turn the device on AFTER you mount it in the vehicle properly.

Make sure that your car is parked on level ground. Follow the instructions to mount your dash cam in a vehicle securely.

1. Mount the dash cam.

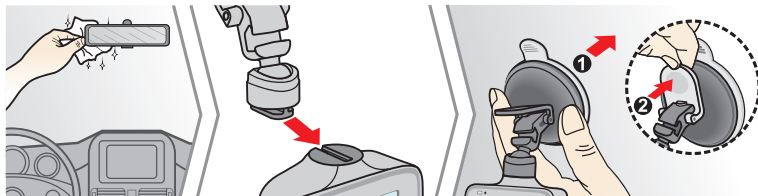

 2. Mount the rear camera (optional).

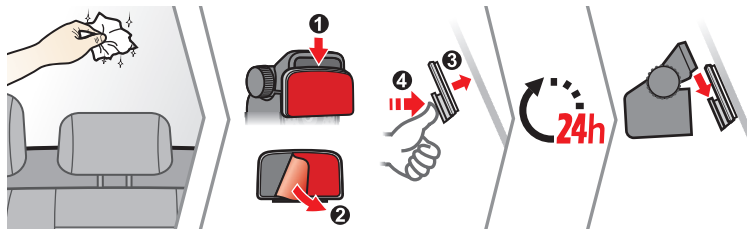

Note:

- Before sticking the mounting pad, it is recommended to clean the windscreen with rubbing alcohol.
- If the adhesion of the adhesive tape does not perform well, replace the tape with a new one.

3. Adjust the lens angle.

 
When adjusting the angle of mounting, make sure that the camera's view is parallel with the level ground and the ground/sky ratio is close to 6/4.

4. Connect the cables.

Route the cables through the top ceiling and the A-pillar so that it does not interfere with driving. Make sure that the cable installation does not interfere with the vehicle's airbags or other safety features.

If you only use the dash cam (without connecting the rear camera) in your vehicle, simply connect the car charger to the dash cam and then plug it to the cigarette lighter.

The installation illustrations are for your reference only. The placement of the devices and cables may vary depending on the vehicle model. If you encounter any problems during installation, contact a skilled installer (such as the service personnel of the vehicle) for assistance.

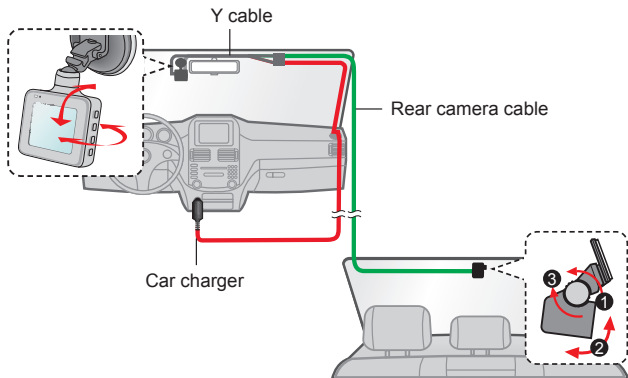


Inserting a memory card

Note:


- DO NOT apply pressure to the centre of the memory card.
- MiTAC does not guarantee the product's compatibility with memory cards from all manufacturers.
- Before you start recording, please format the memory card to avoid malfunction caused by files not created by the dash cam.
- Turn the device off before removing the memory card.

You must insert a memory card (not supplied) before you can start recording. The dash cam supports the Class 10 memory cards with 8 GB – 128 GB capacity.

 Hold the card (MicroSD) by the edges and gently insert it into the slot as shown in the illustration. To remove a card, gently push the top edge of the card inwards to release it and pull it out of the slot.

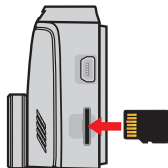

Formatting a card

To format a memory card (all data will be erased), press  and select **Format**.

Connecting to your computer

You can connect the dash cam to your computer to access data on the memory card. Connect the dash cam to the computer via a USB cable (not supplied).

 


Turning the dash cam on

Complete the installation according to the instructions in the “Using your dash cam in a vehicle” section. Once the vehicle engine is started, the dash cam automatically turns on. The System indicator glows in green when the dash cam is powered.


Power button

Press and hold the Power button for 2 seconds to manually turn the dash cam on and off.

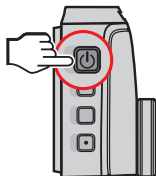


Restarting the dash cam

 If the system does not shut down by keeping the Power button pressed, you can force it to shut down by inserting a small rod (such as a straightened paperclip) into the Shutdown button on the device.



System icons

Various system icons on the status bar at the top of the screen provide the status information of your device. The icons displayed will vary depending on your device model and state.

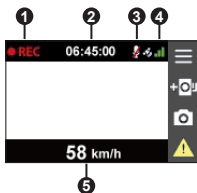 


- 1 Recording indicator
- 2 Time display
- 3 Microphone status
- 4 GPS signal*
- 5 Current GPS car speed*

* For selected models only.

Function keys

 The device provides four function keys to control the corresponding icons displayed on the LCD screen. The keys' functions may vary on different screens.

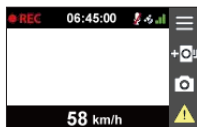

Recording screen


- Opens the Menu screen
- Adds a custom safety (speed) camera
- Takes a photo
- Manually starts an event recording



Menu screen


- Acts as the BACK button
- Acts as the ENTER button
- Moves to the previous option
- Moves to the next option

Switching screens





Once you connect the rear camera and start recording, you can switch the front and rear camera images by pressing .

Setting the date and time

To make sure that the date and time of your recordings are correct, check the settings before you begin recording.

1. Press  to access the Settings Menu.
2. Select **System > Date/Time**.
3. Select **Use GPS time** or **Manual**:
 - When you select **Use GPS time**, select the time zone of your location. The system will set date and time according to the GPS location.



Note: This feature is not available on all models.

- When you select **Manual**, the system will display the date and time setting screen. Use  /  to adjust the value of the selected field; press  and repeat the step until all fields have been changed.
4. When done, press .

Recording in driving mode

Continuous recording


By default, the system will automatically begin with continuous recording in few seconds after start-up. The System indicator flashes in green and amber alternately while the recording is in progress.


When continuous recording is in progress, you can manually stop recording by pressing . Press  to return to the recording screen; the system will start continuous recording automatically.

The recording may be divided into several video clips; recording will not stop between video clips. The continuous recordings can be found in the “Video” category for file playback.

Event recording

By default, if an event happens such as a sudden impact, high speed driving, an aggressive turn or an accidental crash during continuous recording, the G sensor will prompt the dash cam to start recording the event.




Note: You can change the sensitivity level of the G sensor by selecting  > **Video Recording** > **G-Sensor Sensitivity**.

If you want to manually start an event recording while continuous recording is in progress, press the Event button ().

The event recordings can be found in the “Event” category for file playback.

Camera mode











The dash cam allows you to take a photo.

- If the recording is in progress, press  to take a photo. This function is not available when the rear camera is connected.
- Press  > **Camera** > .

The photos can be found in the “Photo” category for file playback.

Playback mode

To select a video or photo for playback:

1. Press  > **File Playback**.
2. Select the desired type.
3. Press  /  to select the desired file from the list and then press  to start playback.
4. During playback, you can:
 - While playing videos, press  /  to play the previous/next video.
 - While viewing photos, press  /  to display the previous/next photo.
 - Press  to return to the list.
 - Press  to display the pop-up menu to select:
 - **Play / Pause:** Starts or pauses the playback.
 - **Play rear video / Play front video:** The "D" icon displayed on the thumbnail on the playlist indicates that the video comes with a corresponding rear video. While playing the video, you can use this option to switch between the front and rear videos.

Note: The video files recorded by the front and rear cameras will be saved separately in the corresponding folders of the memory card. If you move or delete a front video, its corresponding rear video will be processed synchronously.

- **Move to Event:** Moves the file to the "Event" category.
- **Delete:** Deletes the file.

Safety camera alerts

Caution: For legal reasons, the safety camera function is not available in all countries.

You can receive alerts to warn you about the locations of safety (speed) cameras which will enable you to monitor your speed through these areas.

When a safety camera appears and is positioned in the detectable direction, you will receive alerts. The screen will display the visual alert and you will also receive audio warnings.

When the alert sound setting is set to **Beep**:

- When your car approaches a safety camera, you will receive a normal beep alert.
- When your car approaches a safety camera at a speed over the set threshold, you will receive a persistent beep alert until your car speed drops lower than the appropriate speed limit.
- When your car passes through a safety camera, you will be notified by a different beep alert.

 
You can change the settings about how you want to receive the safety camera alerts. See the “System settings” section for information.




Adding a safety camera

Note: You can add a custom safety camera only when a GPS fix is established.

Your dash cam allows you to customise the safety camera database. You can add up to 100 custom safety cameras in your dash cam.

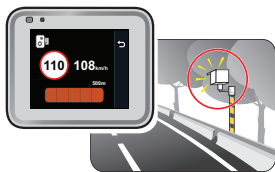Follow the steps to configure a custom safety camera:



1. To add a custom safety camera in the current location, press  on the recording screen.
2. The next time when you pass by the location, you will receive alerts by the dash cam.
3. To view the information of the custom safety camera, select  > **SafetyCam** > **Custom SafetyCam** and then select the safety camera that you want to check.
4. Press  to remove the custom safety camera from the dash cam.

Updating safety camera data

MiTAC does not warrant that all types and locations of safety camera data are available as cameras may be removed, relocated or new cameras installed.

Occasionally, MiTAC may offer you updates of safety camera data. Visit the Mio website for available downloads and follow the instructions to complete update.

System settings

Note: Not all setting items and options are available for all models.

To customise the system settings, press  .

- **File Playback**

Plays the recorded videos and photos.

- **Camera**

Press to enter Camera mode.

- **Sound Recording**

Sets if you want to include sounds in the recordings. The default setting is **On**.

- **SafetyCam**

Sets how you want to be notified of safety cameras. The available settings include:

- **Alert Sound:** Turns on (**Beep** or **Voice**) or off (**Mute**) the alert sound.
- **Alert Distance:** The system will alert you at a preset distance (**Short**, **Medium** or **Long**) when a safety camera is detected.
- **Alert Method:** Sets the alert distance function according to the current GPS car speed (**Smart Alert**) or the speed limit (**Standard Alert**).
- **Threshold:** Sets the speed value for the dash cam to start offering alerts.
- **Cruise Speed Alert:** Sets the limit for the cruise speed. When you drive at a cruise speed over the set value, you will receive alerts by the dash cam.
- **Custom SafetyCam:** Lists all custom safety cameras which are sorted by the created time.


- **Video Recording**

Changes the settings of recording, including:

- **Video Clip Length:** Sets the length of each video clip for a continuous recording (**1 min**, **3 min** or **5 min**).
- **WDR:** Enables the Wide Dynamic Range (WDR) function to improve the dash cam's image quality under high-contrast lighting conditions.
- **EV:** Sets the exposure level (**-1** – **+1**) to adjust the brightness of the image. The default setting is **0**.
- **Frequency:** Sets the frequency to match the flicker frequency of the local power supply when recording.
- **G-Sensor Sensitivity:** Sets the sensitivity level (6 levels, from **Low** to **High**) of the G sensor that allows automatic triggering of the event recording while continuous recording is in progress.

- **Stamps:** Sets the information (**Coordinates** or **G-Sensor**) that will be displayed on the recorded video.
- **Speed stamp:** Displays the driving speed on the recorded video.
- **Text stamp:** Displays customisable text information.
- **System**

Allows you to change the system settings of the device.

 - **Satellites:** Displays the status of the GPS/GLONASS signal reception. You can press  and then select GPS or GLONASS for better signal reception if the need arises.
 - **Date/Time:** Sets the system date and time.
 - **System Sound:** Enables or disables system notification sounds.
 - **Welcome Sound:** Enables or disables the notification sounds during start-up.
 - **Volume:** Adjusts the volume level.
 - **LCD Standby:**
 - **Always On:** Keeps the LCD on.
 - **10 sec / 1 min / 3 min:** Sets the timer for the LCD to turn off automatically after recording starts.
 - **Standby:** Turns off the LCD (in specified time) but still displays the time and speed information.
 - **Language:** Sets the language.
 - **Distance Unit:** Sets the preferred distance unit.
 - **Storage Allocation:** The system provides 3 default memory configurations to store the videos and photos. Select the proper configuration based on your usage.
 - **Restore to Defaults:** Restores the system settings to the factory defaults.

- **Version:** Displays the software information.
- **Format**
Formats a memory card. (All data will be erased.)

MiVue Manager

MiVue Manager™ is a tool for you to view the videos recorded on a MiVue dash cam.

Note: Not all features are available for every model.

Installing MiVue Manager


Download MiVue Manager from the Support page of Mio website (www.mio.com/support) and follow the on-screen prompts to install it. Make sure to download the correct software version (Windows or Mac) according to your computer's operating system.

Playing the recording files

1. Remove the memory card from the dash cam and access the card on the computer via a card reader. You are advised to copy the recording files to your computer for backup and playback.
2. Start MiVue Manager on the computer.
 - By default, MiVue Manager shows the calendar and the file list on the right.
 - When a recording file exists, you will see the date marked with “•.” Click that date to display the files that were recorded on that date.
 - You can select the file type to display: **Event / Normal / Parking**.
 - To display all files in the current folder, click **All**. To return to the calendar view, click **Calendar**.
3. Double-click the desired file on the file list to start playback.

4. The playback controls are described as follows:



- 1 Skips to the previous / next file on the list.
 - 2 Starts or pauses the playback.
 - 3 Changes the playback speed to 1/4x, 1/2x, 1x (default), 1.5x, or 2x.
 - 4 Mutes or unmutes the volume.
 - 5 Adjusts the volume level.
 - 6 Plays the video in full screen.
 - 7 Displays the playback progress. You can click on a point along the track bar to move directly to a different location for the playback.
5. During playback, you can view more driving information from the dashboard panel and the G sensor chart that are displayed below the video playback screen.
- On the dashboard panel, click  to display the map screen.
 - The G sensor chart displays data in 3-axis waveform about the car's shift forward/backward (X), to the right/left (Y) and upward/downward (Z).

Note: The map screen may not display when the computer is not connected to the Internet or when your MiVue model does not support the GPS function.

6. The tool bar allows you to do the following:



- 1 Selects the folder that stores the recording files.

- ② Previews and prints the current video image.
- ③ Saves the selected files to the specified location on your computer.
- ④ Captures and saves the current video image to the specified location on your computer.
- ⑤ Opens the Settings Menu.
 - **Change Language:** Sets the display language of MiVue Manager.
 - **Change Skin:** Sets the colour scheme of MiVue Manager.
 - **Check for Update:** Checks if there is any new version of MiVue Manager. (Internet access is required for this feature.)
 - **About:** Displays the version and copyright information of MiVue Manager.
- ⑥ Exports the GPS information of the selected file in the KML format to the specified location on your computer.
- ⑦ Uploads the selected file to Facebook / YouTube™.

For more information

Caring for your device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage.

- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembling, modifying or any attempt to repair could cause damage to your device, may inflict bodily harm or damage to property and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.
- To discourage theft, do not leave the device and accessories in plain view in an unattended vehicle.
- Overheating may damage the device.

Safety precautions

About charging

- Use only the charger supplied with your device. Use of another type of charger may result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with “LPS”, “Limited Power Source” and output rated + 5 V dc / 1.0 A.

About the charger

- Do not use the charger in a high moisture environment. Never touch the charger when your hands or feet are wet.
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects that will reduce cooling. Do not use the charger while it is inside a carrying case.
- Connect the charger to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the charger if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

About the battery

CAUTION! This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns do not disassemble, crush, puncture or dispose of in fire or water.

- Use a specified battery in the equipment.
- Important instructions (for service personnel only)
 - Caution! Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 - Replace only with the same or equivalent type recommended by the manufacturer.

- The battery must be recycled or disposed of properly.
- Use the battery only in the specified equipment.

About GPS

Note: This feature is not available on all models.

- GPS is operated by the United States government, which is solely responsible for the performance of GPS. Any change to the GPS system can affect the accuracy of all GPS equipment.
- GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS positioning is not available. Signal reception can be affected by situations such as bad weather or dense overhead obstacles (such as trees, tunnels, viaducts and tall buildings).
- The GPS positioning data is for reference only.

Regulatory information

For regulatory identification purposes, MiVue C380D Series is assigned a model number of N578D.



Products with the CE marking comply with the Radio Equipment Directive (RED) (2014/53/EU) - issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Standards:

EN 50498: 2010

EN 55032: 2015+AC: 2016, Class B

EN 55024: 2010

EN 61000-4-2: 2009 / IEC 61000-4-2: 2008 ED. 2.0

EN 61000-4-3: 2006 +A1: 2008+A2: 2010 / IEC 61000-4-3: 2010 ED. 3.2

EN 61000-4-4: 2012 / IEC 61000-4-4: 2012 ED. 3.0

EN 61000-4-6: 2014 / IEC 61000-4-6: 2013 ED. 4.0

EN 61000-4-8: 2010 / IEC 61000-4-8: 2009 ED. 2.0

EN 301 489-1 V2.1.1(2017-02)

Draft EN 301 489-19 V2.1.0(2017-03)

ISO 7637-2: 2011

EN 303 413 V1.1.1(2017-06)

The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

Declaration of conformity

Hereby, MiTAC declares that this N578D is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (WEEE – 2012/19/EU). Instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point.